


# Rapid Flash<sup>(TM)</sup> Superboot<sup>(TM)</sup>

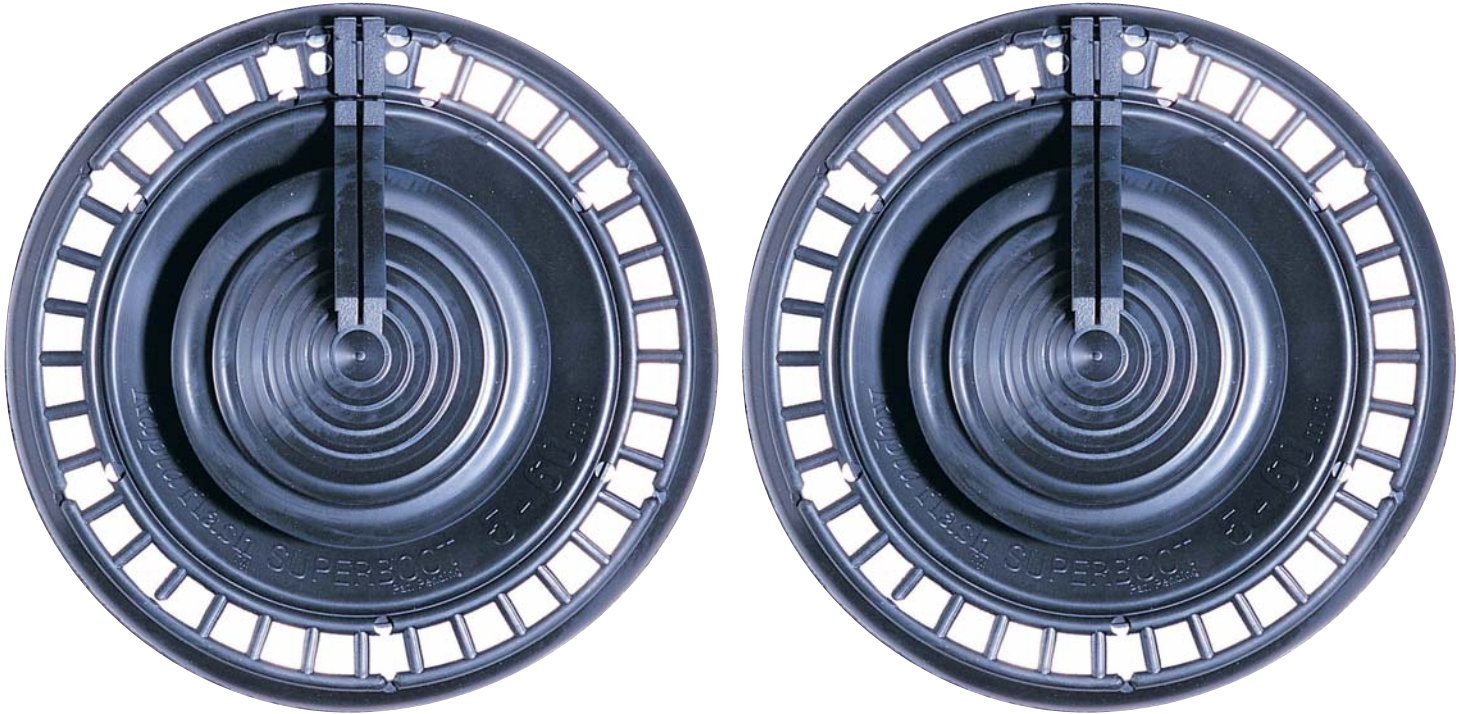

**No silicone required.**

Superboot

Invented by plumbers for plumbers



**To find out more about this Australian made and owned product simply contact us.**

### Available colours and sizes

Colour	Code	Size (mm)
Black	1902160	5-60
	1902162	50-100
	1902164	65-130
	1902166	100-170
	1902168	160-240
	1902170	220-320
	1902172	290-420


- no mess
- no fuss
- no silicone

# 3 easy steps...



1

**Press into shape  
of the roof**

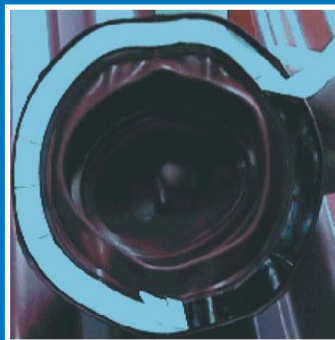

2

## Remove backing



3

Press firmly into place and  
fix to Australian Standards (40mm spacings)

## Rapid Flash Superboot™

[www.superboot.com.au](http://www.superboot.com.au)

0412362011